

# **CAMSHAFT POSITION (CMP) and CRANKSHAFT POSITION (CKP) SENSORS**

## **WHAT THEY DO**


Indicate position of crank (cam) shaft to the computer. This information is used to time injector opening and ignition timing.

## **FAILURE SYMPTOMS**

No start, extended cranking, backfire on start up.

## **MAINTENANCE/SERVICE**

Check trouble codes and diagnose as necessary.

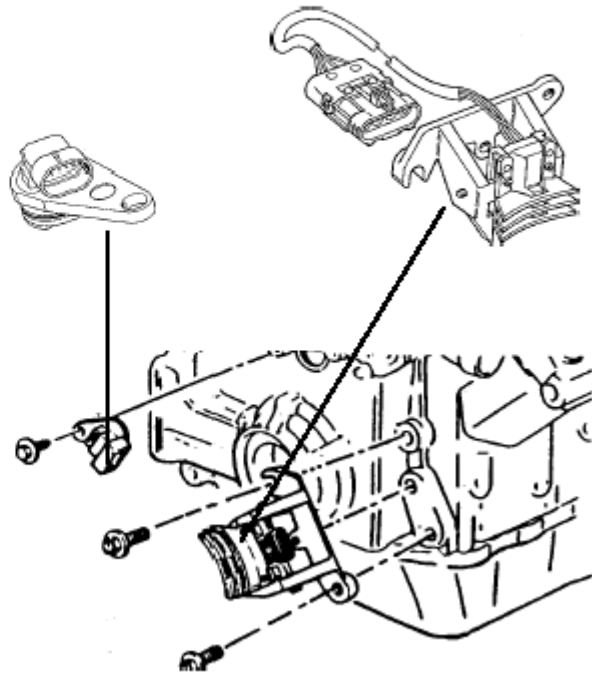

Source: <http://www.tomco-inc.com/Catalog/05cam&crank%20position%20sensors.pdf>

# **CAMSHAFT POSITION (CMP) and CRANKSHAFT POSITION (CKP) SENSORS**

## **WHAT THEY DO**

Indicate position of crank (cam) shaft to the computer. This information is used to time injector opening and ignition timing.

## **FAILURE SYMPTOMS**

No start, extended cranking, backfire on start up.

## **MAINTENANCE/SERVICE**

Check trouble codes and diagnose as necessary.