



Removal and installation

1. Remove front seats and rear cushion, then remove seatback with rear carpet.
2. Take out rear floor padding.
3. Remove opener control knob, then remove console box.

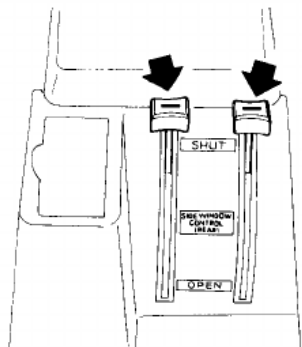


SBF530A

4. Remove base side window cover mask, then remove cover mask.

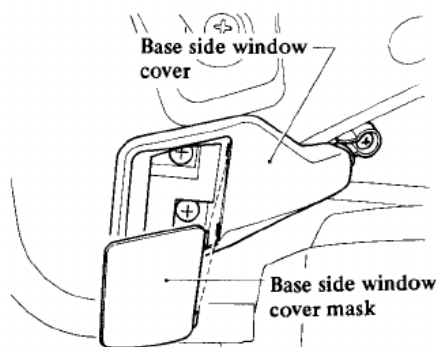


SBF531A

5. Remove base side window.

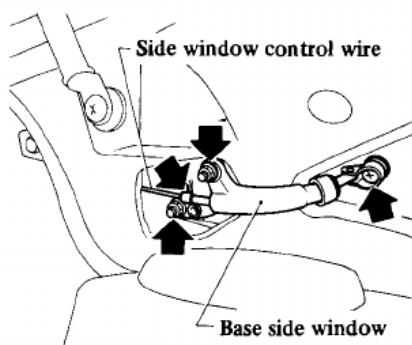


SBF532A

6. Remove rear panel finisher and rear body side trim, then remove control wire clamp.

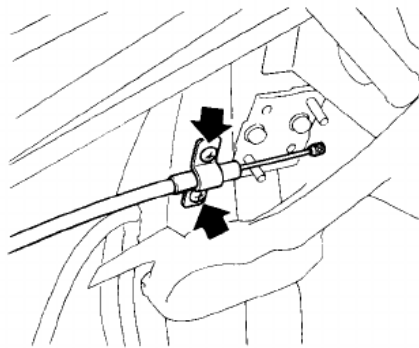

SBF533A

7. Remove opener control assembly attaching screws and wire clamps, then draw out side window control wire.

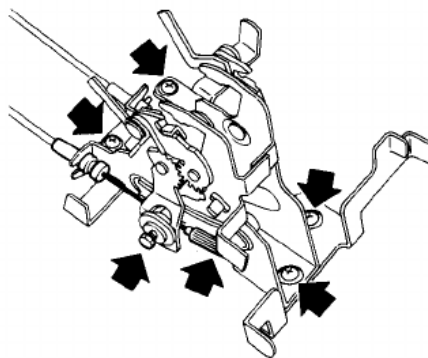


SBF534A

8. Installation is in the reverse order of removal.

After installation, make sure that side window opens smoothly.

Adjustment

Adjusting nut

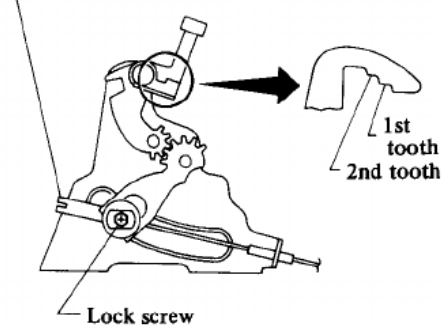

SBF535A

1. Set control lever stopper at 1st tooth.
2. Fully close side glass by turning adjusting nut and tighten lock screw securely.

When wire elongates to such an extent that stopper must be locked at 2nd tooth, loosen lock screw and turn adjusting nut so that stopper engages with 1st tooth. Tighten lock screw securely.